


NOTE:

THIS FLASHING DETAIL DOES NOT WARRANT AGAINST LEAKS THAT MAY OCCUR DUE TO WATER INFILTRATION THROUGH ADJACENT UNTREATED CONCRETE OR OTHER MATERIALS TO REMAIN BY OTHERS.

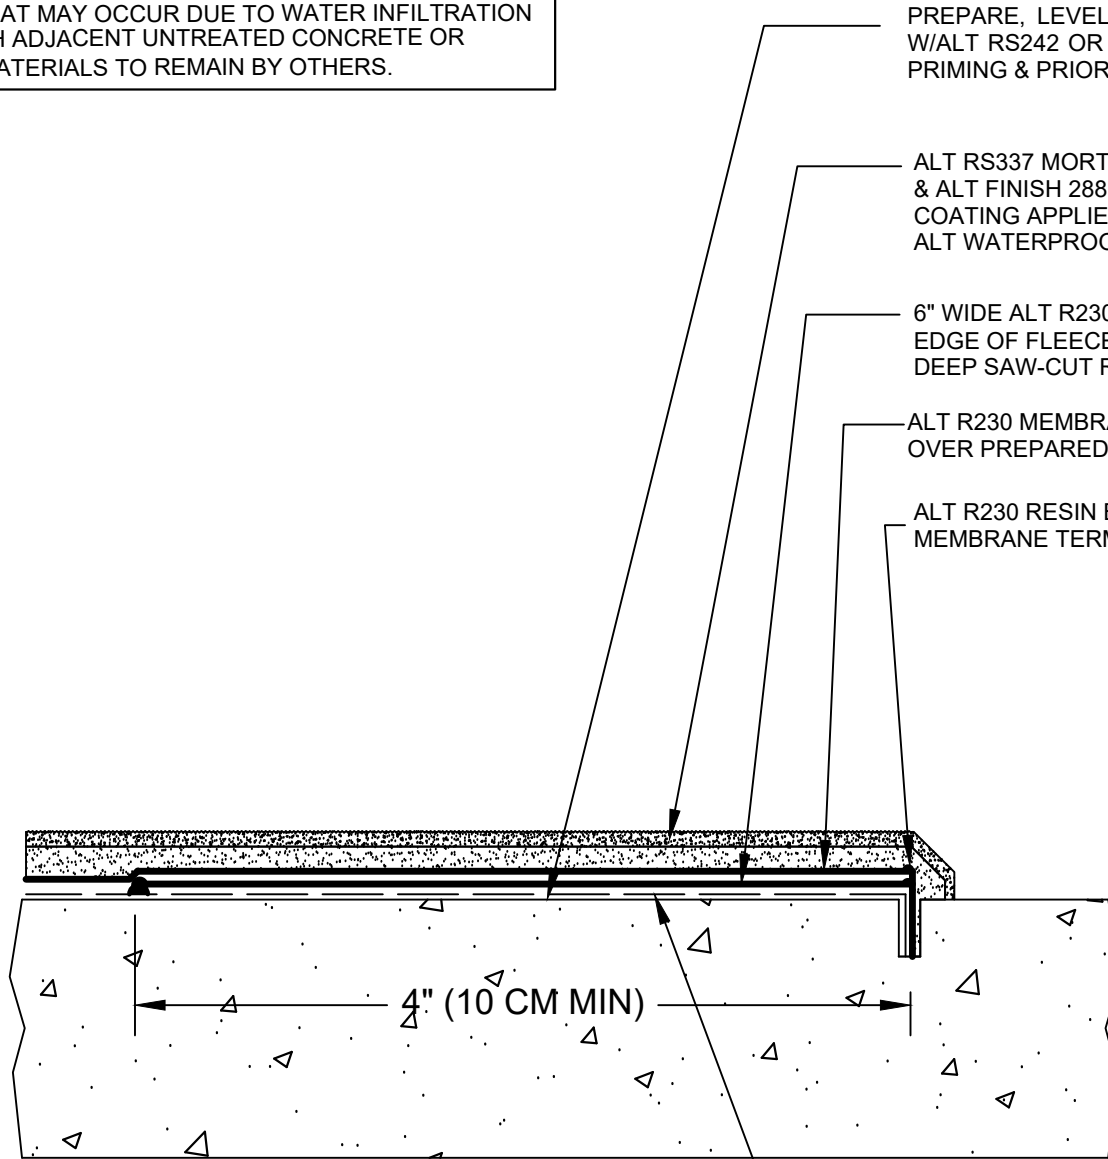

PREPARE, LEVEL & PATCH SUBSTRATE W/ALT RS242 OR RS337 MORTAR AFTER PRIMING & PRIOR TO APPLY MEMBRANE.

ALT RS337 MORTAR W/BROADCAST AGGREGATE & ALT FINISH 288 OR ALT R268 TEXTURED COATING APPLIED CONTINUOUSLY OVER ALT WATERPROOFING MEMBRANE (TYP.)

6" WIDE ALT R230 MEMBRANE STRIP-PRESATURATE EDGE OF FLEECE W/RESIN & TUCK INTO 1" MIN. DEEP SAW-CUT REGLET (TYP.)

ALT R230 MEMBRANE APPLIED CONTINUOUSLY OVER PREPARED & PRIMED SUBSTRATE (TYP.)

ALT R230 RESIN BEAD TYPICAL @ ALL MEMBRANE TERMINATION POINTS (TYP.)

ALT PRIMER 276 OR 276K APPLIED TO PREPARED SUBSTRATE (TYP.)

DRAWING NO.:

TR-E3

TR_E03

HORIZONTAL REGLET TERMINATION

DRAWN BY

ALT Global

SCALE

N.T.S.

ISSUE DATE

03/23/17

REVISION

0

