


**NOTE:**

APPLY DE-BONDING TAPE & MEMBRANE EXPANSION STRIPS AT ALL JOINTS IN METAL-SEE TYPICAL DETAIL. MEMBRANE EXPANSION STRIPS MUST EXTEND THE FULL PROFILE & EXPOSED FACE OF METAL FLASHING.

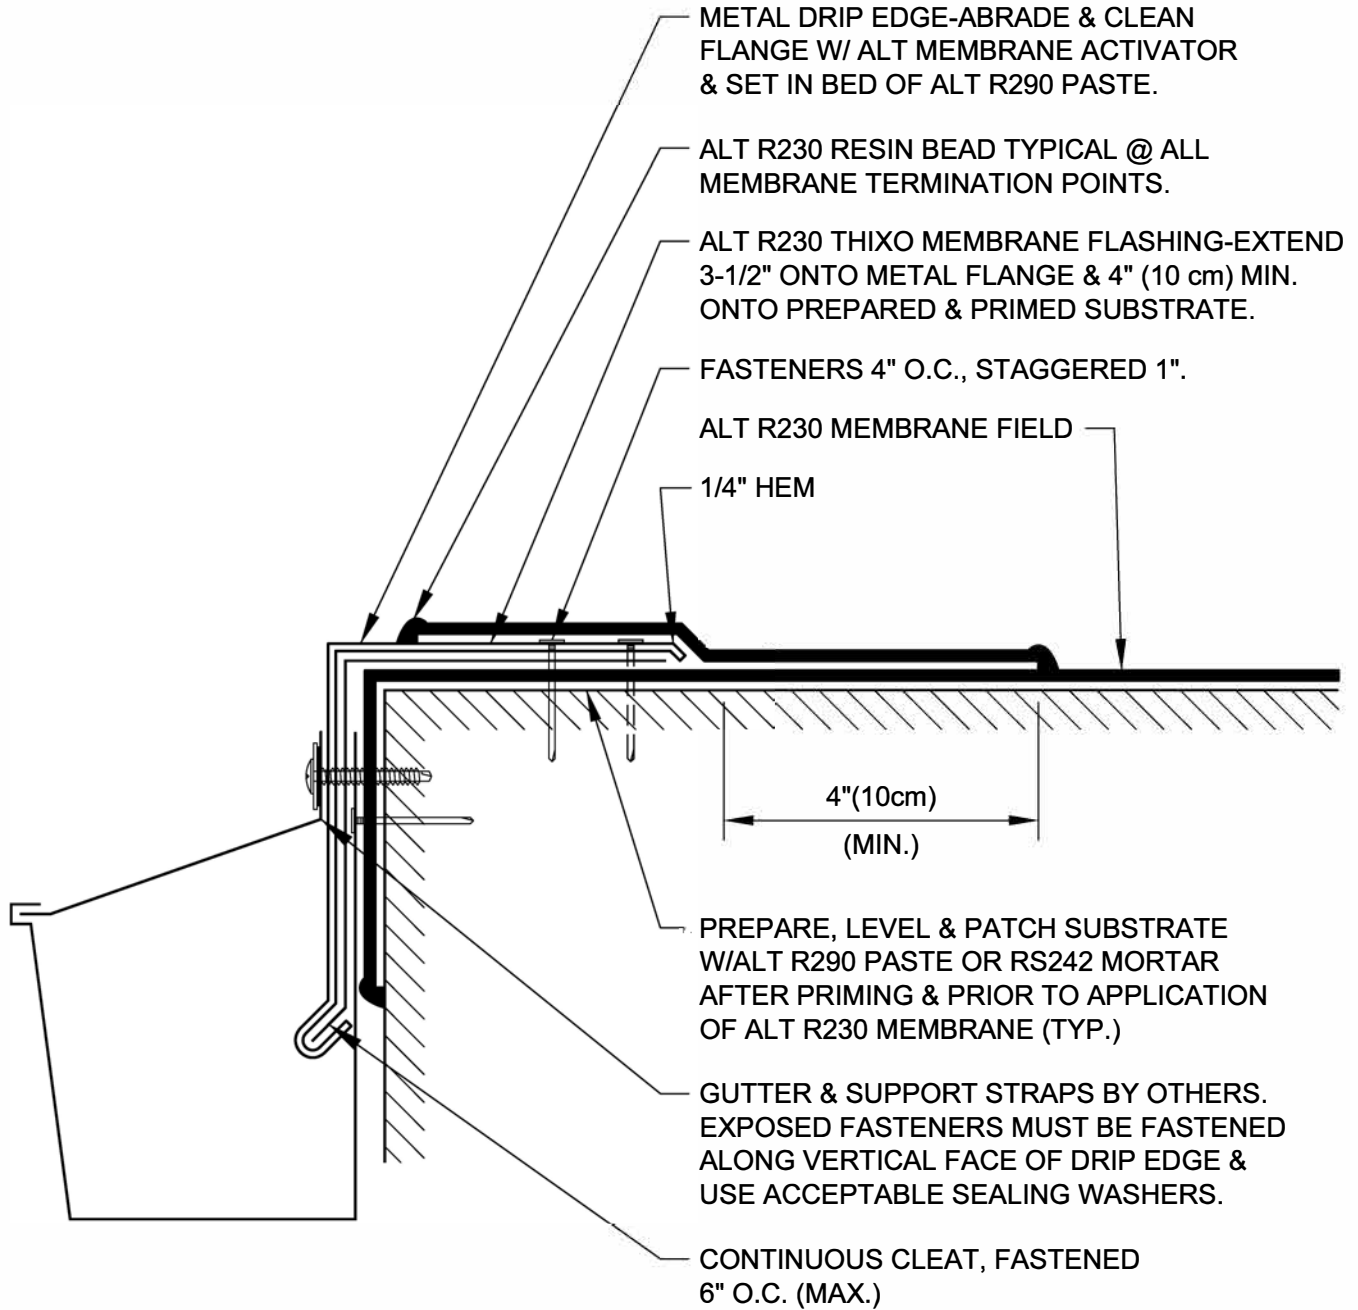

**METAL DRIP EDGE GUTTER DETAIL**

DRAWING NO.:

**E-1C**

REVISION  
0

ISSUE DATE  
10-15-2014

SCALE  
N.T.S.

DRAWN BY  
ALT Global

AE\_01C