


**NOTE:**

APPLY DE-BONDING TAPE & MEMBRANE EXPANSION STRIPS AT ALL JOINTS IN METAL-SEE TYPICAL DETAIL. MEMBRANE EXPANSION STRIPS MUST EXTEND THE FULL PROFILE & EXPOSED FACE OF METAL FLASHING.

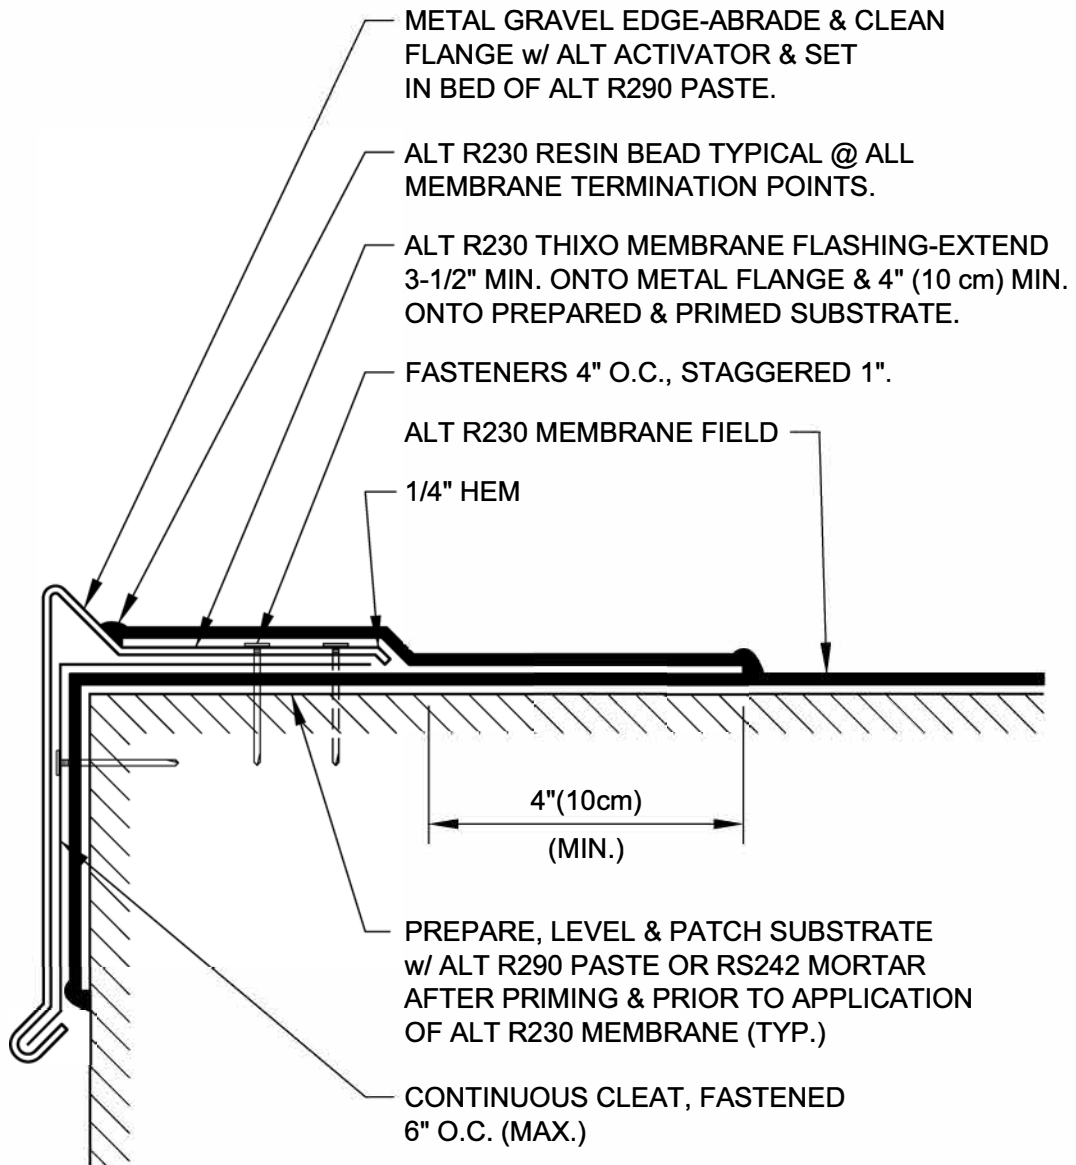

**METAL ROOF EDGE FLASHING**

DRAWING NO.:

**E-1A**

REVISION

0

ISSUE DATE

10-15-2014

SCALE

N.T.S.

DRAWN BY

ALT Global

AE\_01A