


ALT FINISH 288 COLOR TOPCOAT
APPLIED SMOOTH OR MIXED W/ALT
ANTI-SLIP ADDITIVE (OPTIONAL)

ALT R230 MEMBRANE

ALT RS337 MORTAR LEVELING
COAT APPLIED OVER ALT PRIMER
FOR LEVELING & FILLING MINOR
ALLIGATORING WHEN REQ'D.

ALT PRIMER APPLIED TO
PREPARED BUR (TYP.)

EXISTING SMOOTH OR GRAVEL
SURFACED (GRAVEL REMOVED)
BUR PREPARED AS SUBSTRATE
FOR NEW MEMBRANE (TYP.)

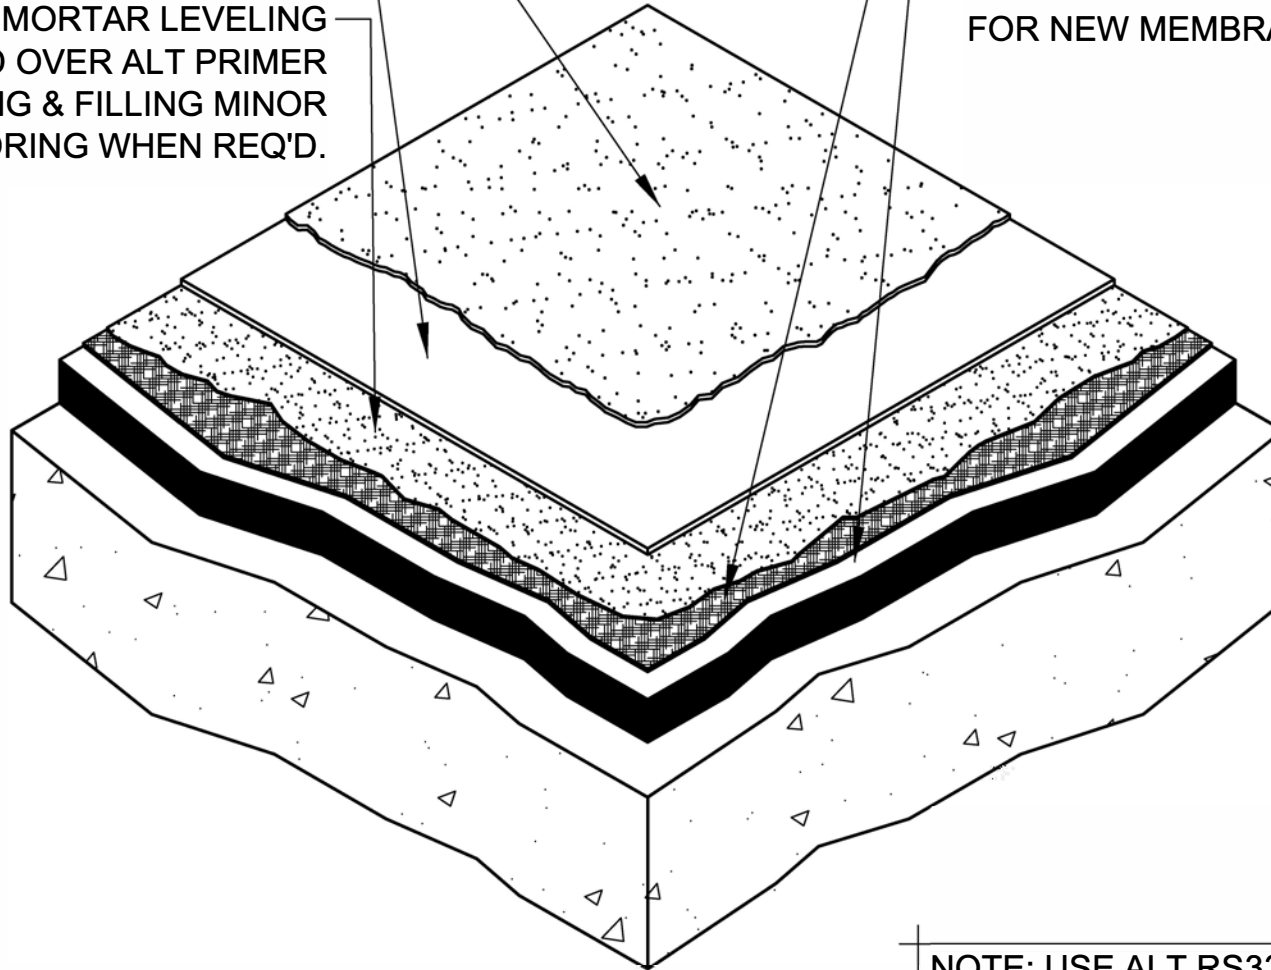

NOTE: USE ALT RS337 MORTAR
AS NEEDED TO FILL ALLIGATORING,
MINOR FISSURES & LEVEL ROOF
BIRD-BATHS OR DEPRESSIONS.

DRAWING NO.:

R-7A

AR_07A

**ALT R230 MEMBRANE ROOF ASSEMBLY
BUR RECOVERY - OPTION 1 (NON-INSULATED)**

REVISION

0

ISSUE DATE

10-15-2014

SCALE

N.T.S.

DRAWN BY

ALT Global



ALT