

ISOMETRIC VIEW


PREPARE, LEVEL & PATCH SUBSTRATE W/ALT R290 PASTE OR RS242 MORTAR AFTER PRIMING & PRIOR TO APPLICATION OF ALT R230 MEMBRANE (TYP.)

ALT R230 MEMBRANE FIELD

ALT R230 THIXO TARGET FLASHING EXTEND FROM EDGE OF DRAIN BOWL ONTO PREPARED & PRIMED SUBSTRATE.

ALT R230 THIXO FINGER FLASHING EXTENDED MINIMUM 2" (5 cm) INTO PREPARED & CLEANED DRAIN BOWL.

CLAMP RING & STRAINER

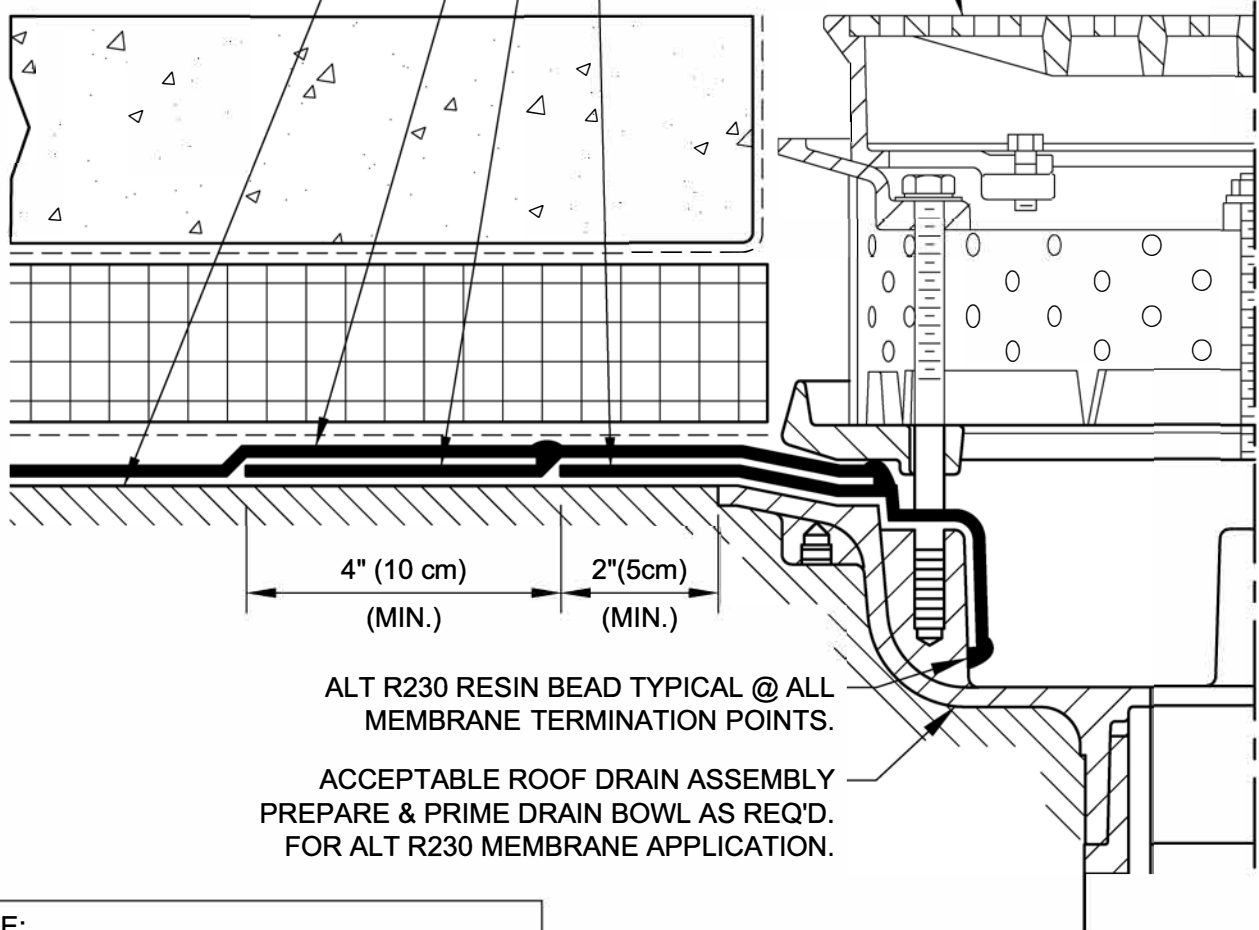

ALT R230 RESIN BEAD TYPICAL @ ALL MEMBRANE TERMINATION POINTS.

ACCEPTABLE ROOF DRAIN ASSEMBLY  
PREPARE & PRIME DRAIN BOWL AS REQ'D.  
FOR ALT R230 MEMBRANE APPLICATION.

NOTE:

USE ALT R290 PASTE MIXED W/KILN-DRIED SAND TO SET DRAIN BOWL, FILL VOIDS OR CAVITIES & PROVIDE SMOOTH TRANSITION BETWEEN SUBSTRATE & DRAIN BOWL.



TYPICAL PLAZA DECK DRAIN FLASHING

DRAWING NO.:

**D-1C**

REVISION  
0

ISSUE DATE  
10-15-2014

SCALE  
N.T.S.

DRAWN BY  
ALT Global

AD\_01C