


NOTE:

APPLY DE-BONDING TAPE & MEMBRANE EXPANSION STRIPS AT ALL JOINTS IN METAL-SEE TYPICAL DETAIL. MEMBRANE EXPANSION STRIPS MUST EXTEND THE FULL PROFILE & EXPOSED FACE OF METAL FLASHING.

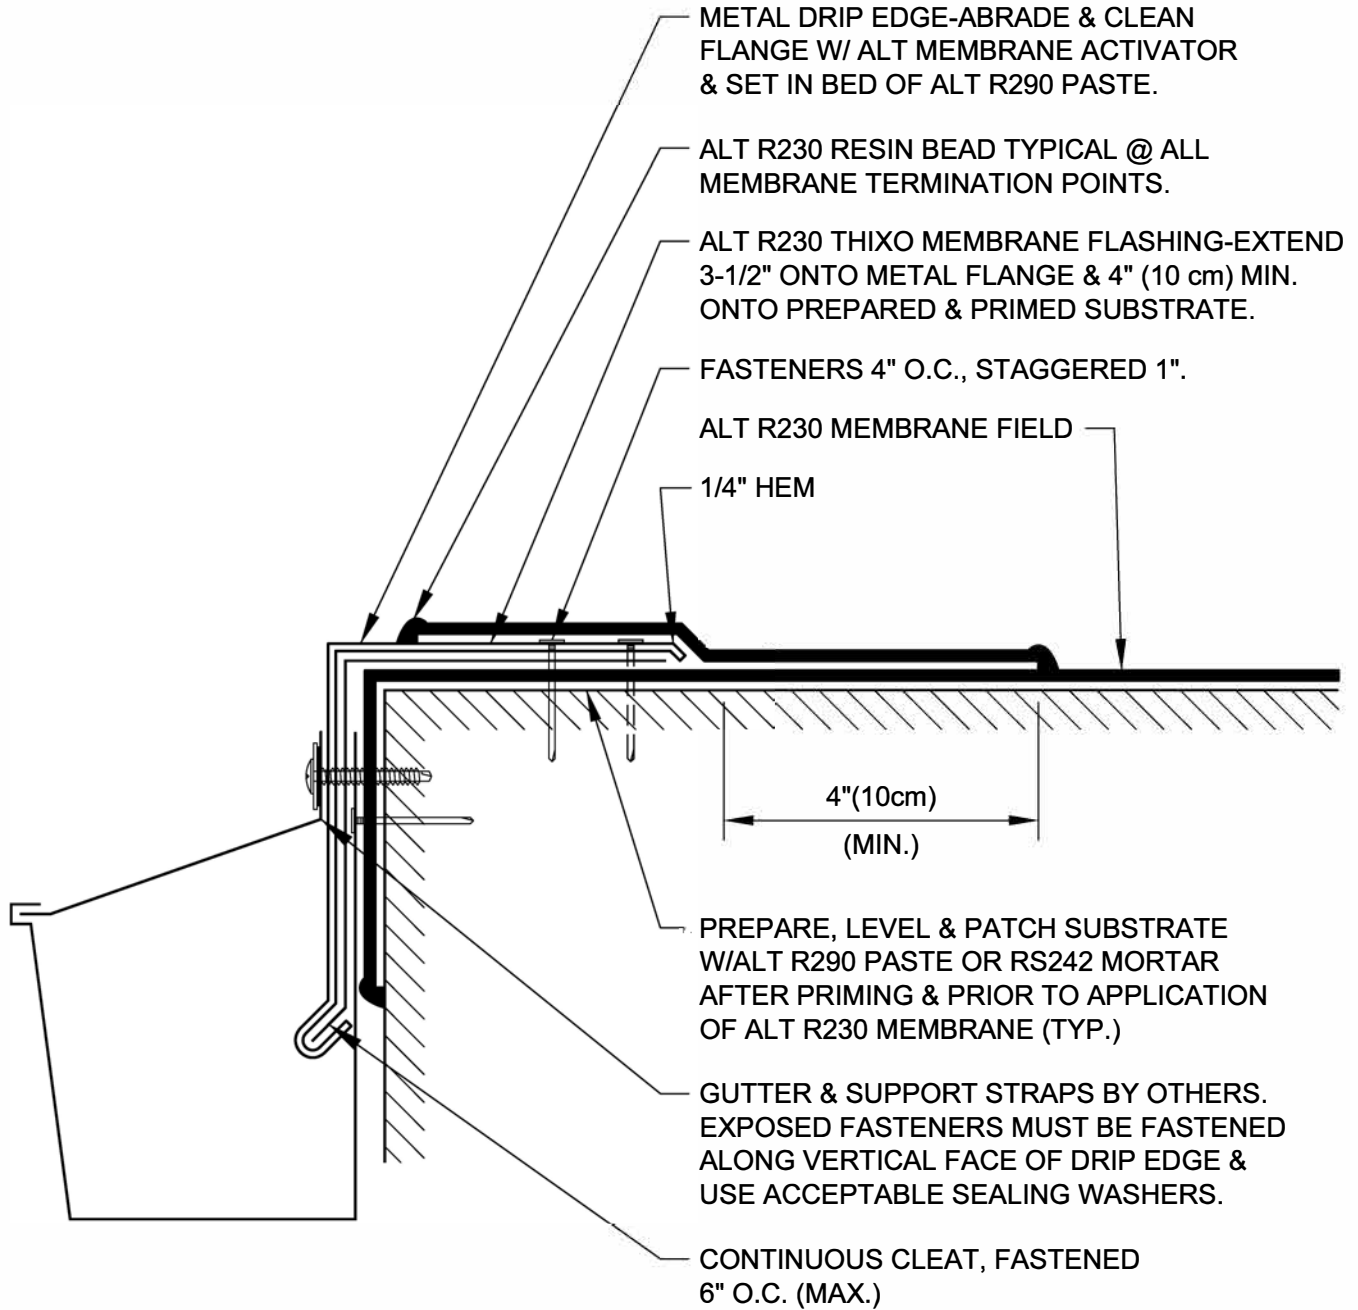

METAL DRIP EDGE GUTTER DETAIL

DRAWING NO.:

E-1C

REVISION
0

ISSUE DATE
10-15-2014

SCALE
N.T.S.

DRAWN BY
ALT Global

AE_01C